



I carichi sfilabili in verticale dipendono dall'angolo del braccio e dallo stato dei pattini.  
 The size of the loads that can be handled when extending the boom in vertical position are depending from the angle and the conditions of the wear pads.